


FTC

- 1 Connect to 12V from a spare XT30 port on the Expansion Hub or a Y cable from the battery
- 2 Select either a 12V or 5V LED strip

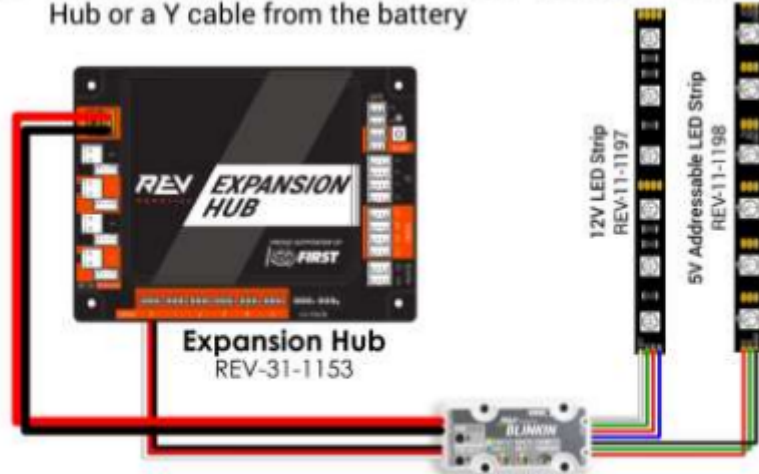

- 3 Connect PWM cable to a Servo output on the Expansion Hub
Send servo output values between 0.2525 and 0.7475 to drive different LED patterns

Revisão #2

Criado 3 maio 2024 11:58:13 por João Vitor Loeblein

Atualizado 25 junho 2024 12:46:52 por Bruno Toso